

SIGMA

Compatibility of the SIGMA TELE CONVERTER TC-1411 / TC-2011

As of February, 2025

* Dedicated tele converters for use with only those SIGMA GLOBAL VISION lenses listed in the above chart and cannot be used with any other lenses.

| Please refer to the column indicating your lens mount | L-Mount | |
|--|---------|----|
| | 1.4X | 2X |
| 105mm F2.8 DG DN MACRO Art [A020] | AF | AF |
| 500mm F5.6 DG DN OS Sports [S024] | AF | AF |
| 60-600mm F4.5-6.3 DG DN OS Sports [S023] | AF | AF |
| 70-200mm F2.8 DG DN OS Sports [S023] | AF | AF |
| 100-400mm F5-6.3 DG DN OS Contemporary [C020] | AF | AF |
| 150-600mm F5-6.3 DG DN OS Sports [S021] | AF | AF |
| 300-600mm F4 DG OS Sports [S025] | AF | AF |

- Cannot be attached to a camera and lens whose mount is different.
- Cannot be used in combination with another SIGMA TELE CONVERTER or other manufacturer's converter. Only one tele converter can be used at one time.
- Compatible with Leica Camera L-Mount and Panasonic L-Mount lenses that accept teleconverters in addition to the SIGMA L-Mount lenses listed above.
- Before using the teleconverter, update the firmware of the lens and teleconverter to the latest version.
- The performance of the teleconverter is not guaranteed when used with lenses produced by other manufacturers.

Note

Please attach the TELE CONVERTER to the master lens first then attach the combined TELE CONVERTER and lens to the camera body. Attaching to SIGMA TELE CONVERTER to the camera body first may cause a malfunction and accurate operation is not guaranteed.

About exposure

Using the SIGMA TELE CONVERTER decreases the effective aperture by one F-stop (with 1.4x Tele Converter) or by two F-stops (with 2x Tele Converter). Although the exposure becomes lower, the operation is optimized.